

## List of Parts (SL-75&100)

NO	Name	Mtrl	Photo	NO	Name	Mtrl	Photo
1	Cable	H07/UL		13	Protector (1 Phase)		
2	Handle	Steel		13	Protector (3 Phase)		
3	Motor Cover	ADC12		14	Capacitor		
4	Bracket	Steel		15	Bearing		
5	Motor Housing +Stator	ADC12		16	Strainer	NBR	
6	Shaft with Rotor	SUS 410		17	O-ring	NBR	
7	Oil Chamber	ADC12		18-3	Wearing Plate	PA66+20% GF	
8	Mech. Seal	SIC/SIC		18-4	Volute Liner	NBR	
10	Oil Seal	NBR		27	Flange	FC 15	
11	Impeller	Hytrel		30	Pump Housing	SUS 304	
12	Pump Casing	FC 20					

NO	Name	Mtrl	NO	Name	Mtrl
18	Gasket	NBR	22	Screw with O-ring	
18-1	Gasket	NBR	29	Insulating Paper	
18-2	Gasket	NBR	31	Nut	SUS 304
19	Screw	SUS 304	31-1	Nut	SUS 304
19-1	Screw	SUS 304	32	Pump Casing Ring	SUS 304
19-2	Screw	SUS 304	33	Spring Washer	SUS 304
19-3	Screw	SUS 304	33-1	Spring Washer	SUS 304
19-4	Screw	SUS 304	34	Corrugated Spring	Steel
19-7	Screw	SUS 304	35	Sleeve	SUS 304
20	Washer	SUS 304			

# Exploded View (SL-75&100)

